

YEALINK DECT PHONE W60P - W56H Quick Start Guide



Your Phone

- Handset
- 2 Base Station
- 3 Charger Cradle
- (4) Battery level indicator
- 5 Soft Key
- 6 On/Off Button
- D Lock/Unlock
- 8 Mute
- 9 Navigation Button

Basic Operations

Turning Handset On/Off:

- Press 👩 , then the LCD screen lights up.
- Place the Handset in the charger cradle to turn on automatically.
- Long press 👩 again to turn the Handset off.

Locking/Unlocking keypad:

- Long press [#.) when the Handset is idle to lock the keypad.
- Long press 🚛 again to unlock the keypad.

Switching Silent Mode On/Off:

- Long press 👀 when the Handset is idle to lock the keypad.
- Long press 🔝 again to unlock the keypad.

Make a Call

Enter the desired number when the handset, then press. 🌈

To place a call from the local directory:

- 1. Press \checkmark when the handset is idle.
- 2. Press ▲ or ▼ to highlight the desired entry, and then then press.
- Answer a Call, do one of the following:
- Press the **Accept** soft key.
- Alternatively press 📢 🌈 or 💽 .

To end a Call

Press. 🕤

Put a Call on Hold

- 1. Press the **Options** soft key during a call, and then select Hold.
- 2. To resume the call, press the **Resume** soft key.

Access the Directory

- Press the extension were select when the main menu, and then select pirectory OR
- When the Handset is idle press $oldsymbol{
 abla}$.



Transfer a Call to Another Person	Notes
 Press the Options soft key during call, and then select Transfer. 	
2. Enter the number you want to transfers the call to.	
3. Press Transfer soft key.	
Make a Call with the Speakerphone	
1. Enter a number using the keypad.	
2. Press Speakerphone.	
Mute Your Audio	
1. Press Mute key.	
2. Press Mute again to turn mute off.	
Listen to Your Voice Messages	
Press Messages keys and follow the voice prompts. To	
check messages for a specific line, press the line button first.	
Adjust the Volume in a Call	
Whilst in call, press ◀ or ▶ .	
Adjust the Ringtone Volume	
Press ◀ or ▶ , whilst in a call.	